## INSTALL BATTERIES

Use screwdriver (not included) to remove screw from battery door as shown. Insert 4 AA batteries (not included). Be sure to insert batteries as indicated inside compartment. Replace battery cover and refasten screw. Use only alkaline batteries. Do not use rechargeable batteries. Air Hogs® E-Chargers™ may not work with other types of batteries.

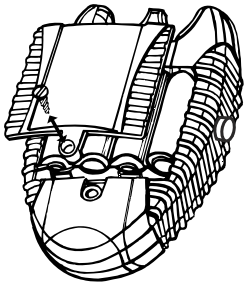

## DIRECTIONS FOR USE

1. Insert charge rod all the way into power port. DO NOT force charge rod into power port the wrong way. Contact point on charge rod must match up with contact points inside power port.
2. **MAKE SURE HANDS ARE SAFELY AWAY FROM PROPELLER.** Now, push button on side of charger. The propeller will begin to spin. This indicates that the motor is charging. As the motor charges, you will hear it rev, and the speed of the propeller will increase until reaching the required RPM (Revolutions Per Minute) for take-off.

**DO NOT CHARGE FOR MORE THAN 10 SECONDS. For best performance, let motor cool for 2 minutes between charges.** USE NEW BATTERIES ONLY! Used batteries will decrease plane's performance. Allow propeller to spin freely. **DO NOT** attempt to stop propeller from spinning.

3. After plane is fully charged, remove charge rod from power port. Gently toss Air Hogs® plane upward against the wind as shown.

1.

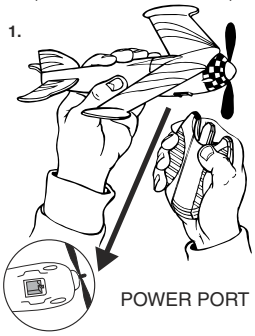


2.

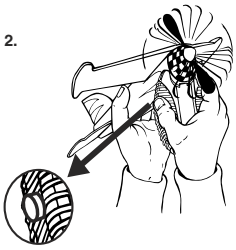


3.

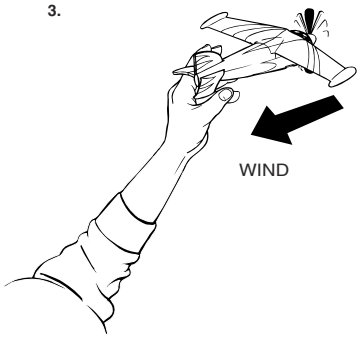


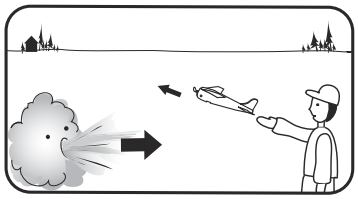

E-Chargers™ are very light. As a result, the wind will greatly affect the flight. In some cases, it may be necessary to adjust the rear flaps as the plane's factory settings may shift slightly during manufacturing or shipping.

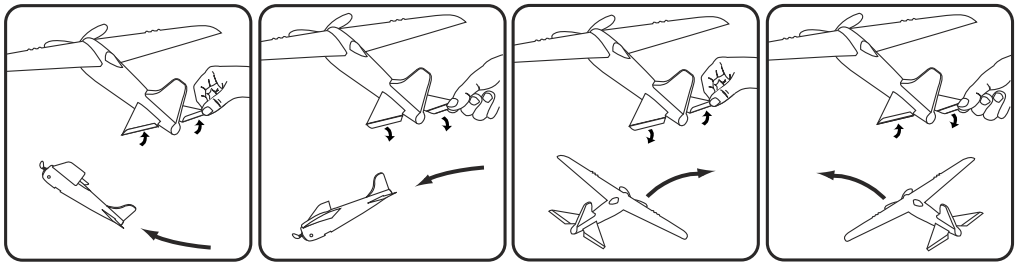

Be sure to Fly Air Hogs® E-Chargers™ planes in a grassy, wide-open area free of trees, overhead wires and other obstructions. This will ensure soft landings, and will thus help extend the life of your plane.
If your plane gets caught in a tree or other object, NEVER climb up to get it yourself. Call an adult for help.
Do not point or aim the plane at any person or animal. Do not use in a confined environment.

**CAUTION!**

1. Never mix old batteries with new batteries. Replace all batteries at the same time.
2. Do not mix alkaline batteries, with standard (carbon-zinc) or rechargeable batteries.
3. Make sure that the contact surfaces are clean and bright before installing batteries.
4. Remove old or dead batteries from the charger.
5. Never recharge non-rechargeable batteries.
6. Do not short-circuit the supply terminals by inserting anything other than the charger into the Power Port.
7. If you will be storing the toy for an extended time period, remove batteries to prevent leakage.
8. Be sure to insert batteries with the correct polarities.
9. Rechargeable batteries are not recommended, as the performance may suffer.
10. Do not play near water. If plane gets wet allow to dry for at least 3 days in a dry cool place.

**CAUTION:** Plane contains a rechargeable cell. If fluid leaks from plane, avoid contact with eyes and dispose of plane.
**Only use charger supplied with Air Hogs® E-Chargers™.**
**Do not use any other source to charge Air Hogs® E-Chargers™.**

Air Hogs®, E-Chargers™ & © 2002 Spin Master Ltd.
All Rights Reserved.
Manufactured and distributed by Spin Master Toys™

Spin Master Ltd.
450 Front Street West
Toronto, ON M5V 1B6 Canada
Ph. 1-800-622-8339 Fax. 416-364-8005
E-mail: toys@spinmaster.com
Web: www.spinmaster.com
www.airhogs.com
MADE IN CHINA
Asst.# 40124, 40004 rev. 8